

RU инструкция по монтажу и эксплуатации душевых систем с термостатическим смесителем

PL instrukcja montażu i obsługi systemów prysznicowych z baterią termostatyczną

EN installation and operation manual for shower systems with thermostatic faucets

KK арналған монтаждай және експлойатасыла бояйнша нұсқаулық

AZ терmostatik su kranlı dus sistemlerinin quraşdırılması və istismarı üzrə təlimat

UZ терmostatli smesiteli bor dush tizimini o'smatish va foydalaniш bo'yicha yo'riqnomalar

KG душ түтүмнүн орноттуу жана иштетүү бөюнча нускамасы

KA термостатიკურის მოწყევის და კენტლეტის ინსტრუქცია

TK gurnamak we ullanmak boýunça gózükde

HY սկզբանապիտ նորարար գեցүүлүү համафарығы Տүзүүлүүдүү և շаңащырдынан һүшүнүү

TJ дастурамал оңд ба наасбүнүн ва истифадабарин системалары дүши би омектакундан термостатик


MN халун хүйтэн тогтмол байлагас үс холигчтой шүршүүр систем угсралас ашиглалас заавар



Ø 6 mm

2,5 mm

1

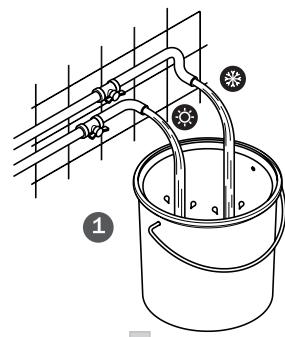


1




2


2




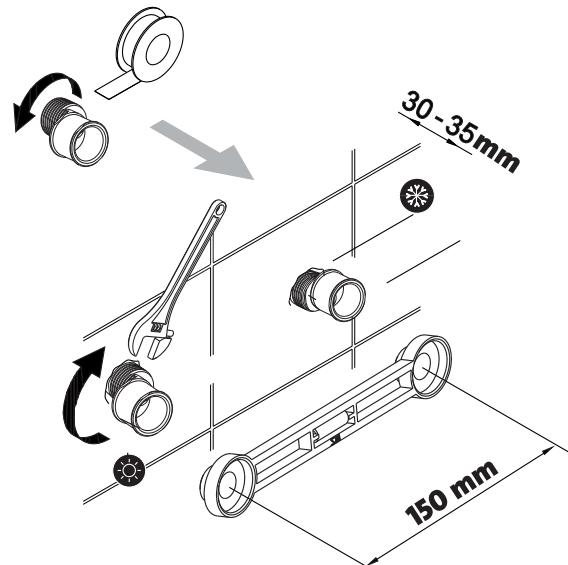


3

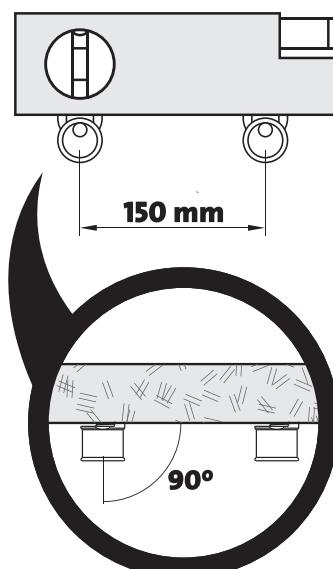


4



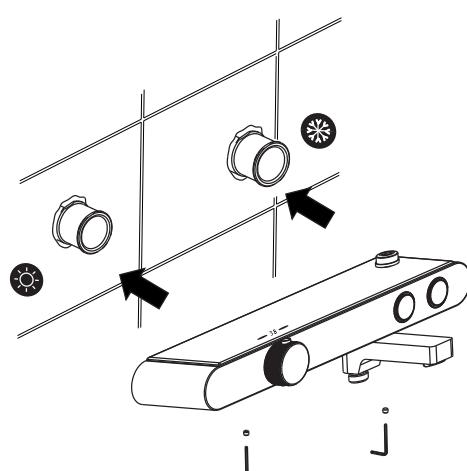


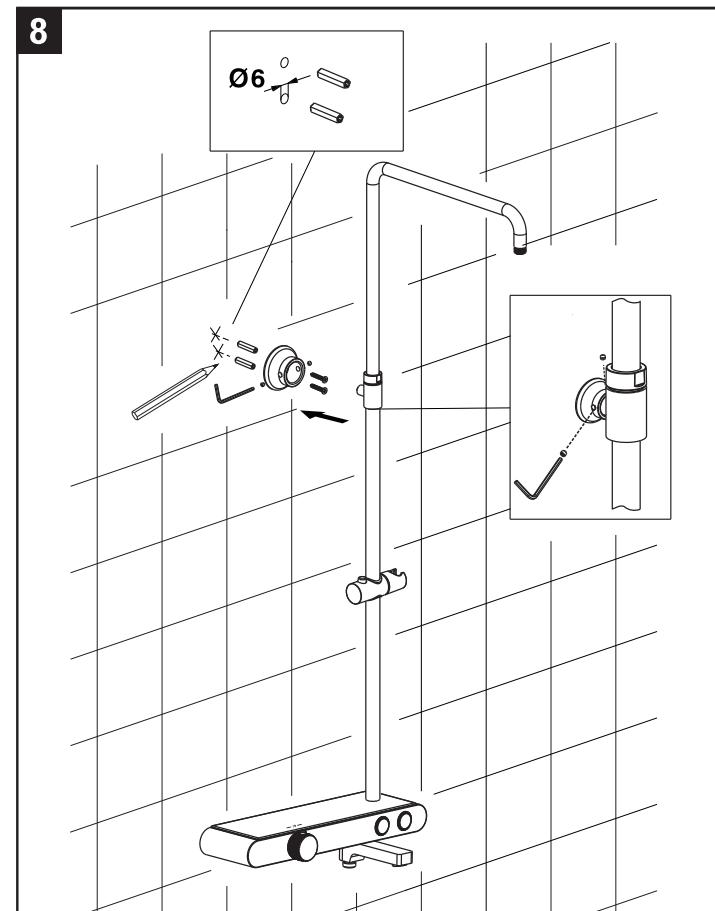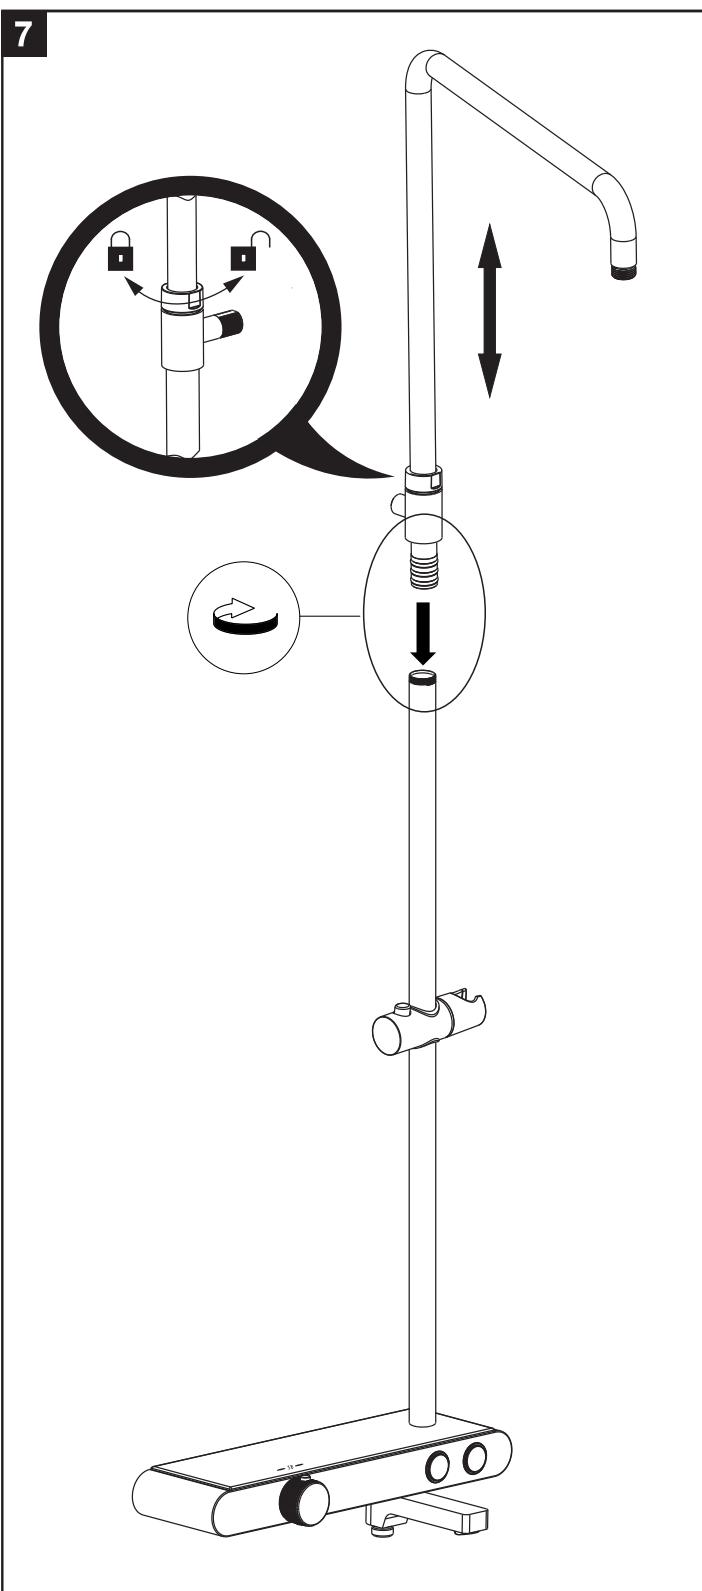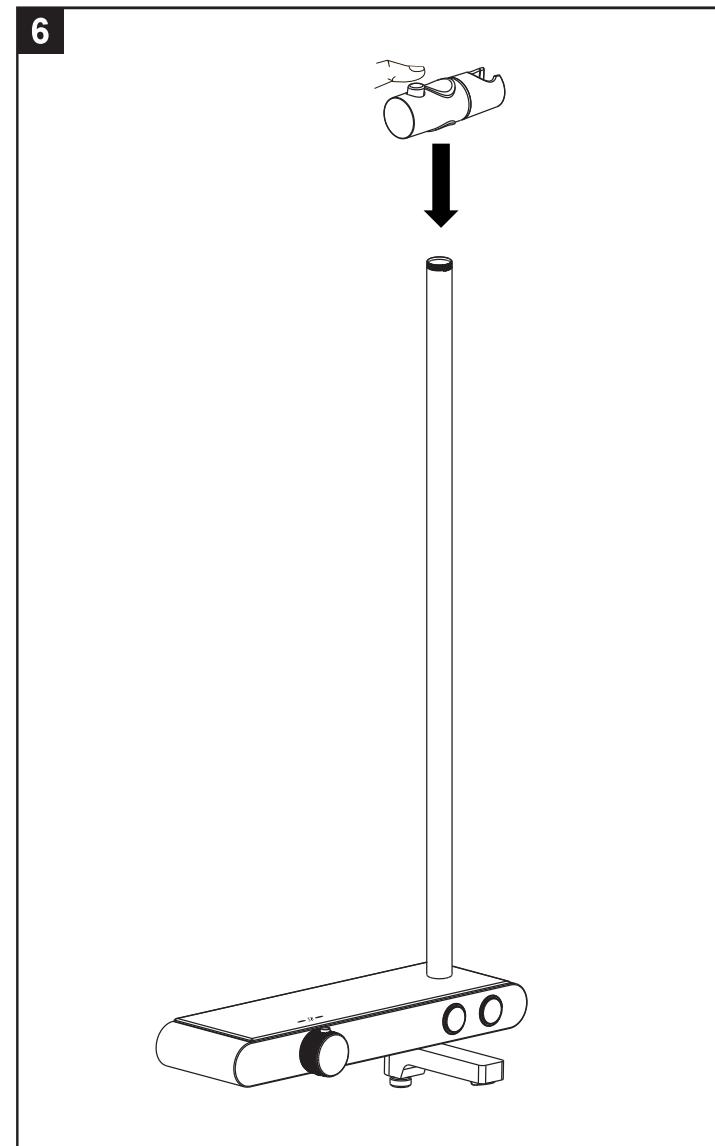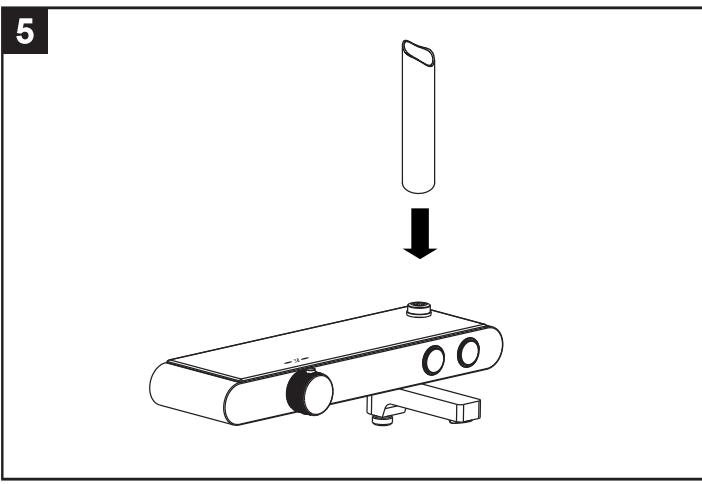



9

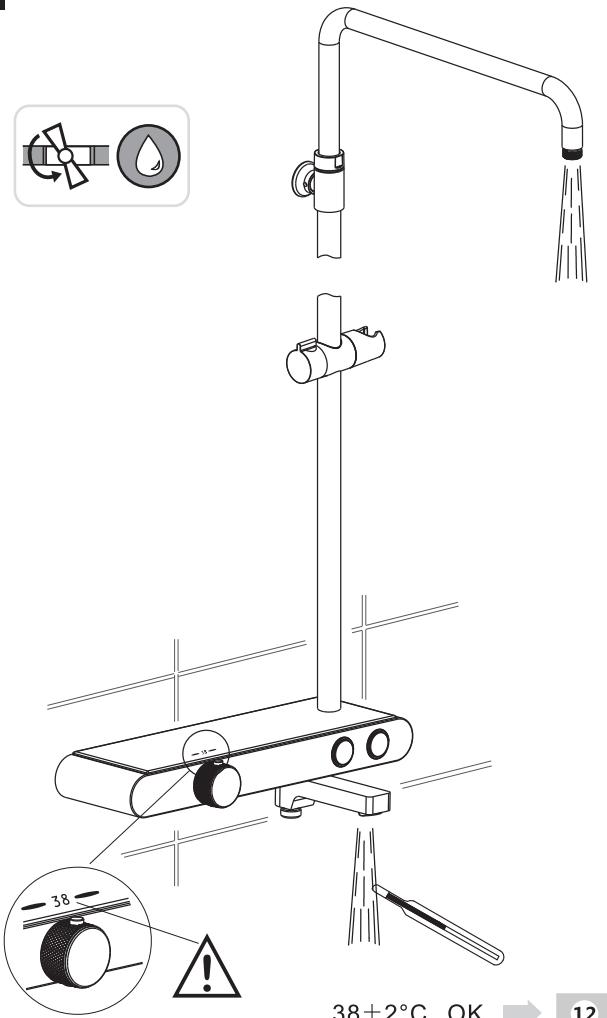


10

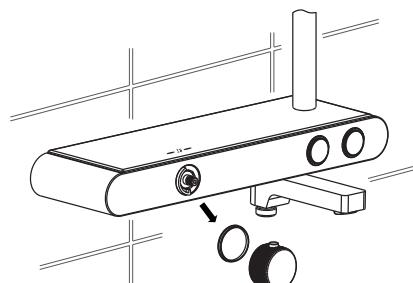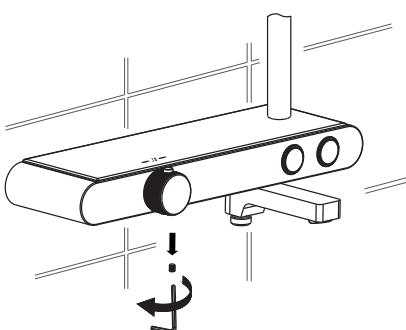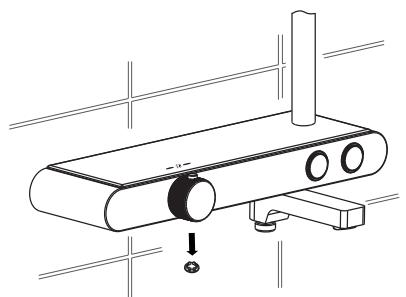

11

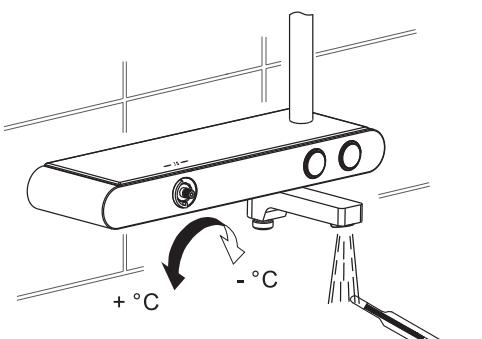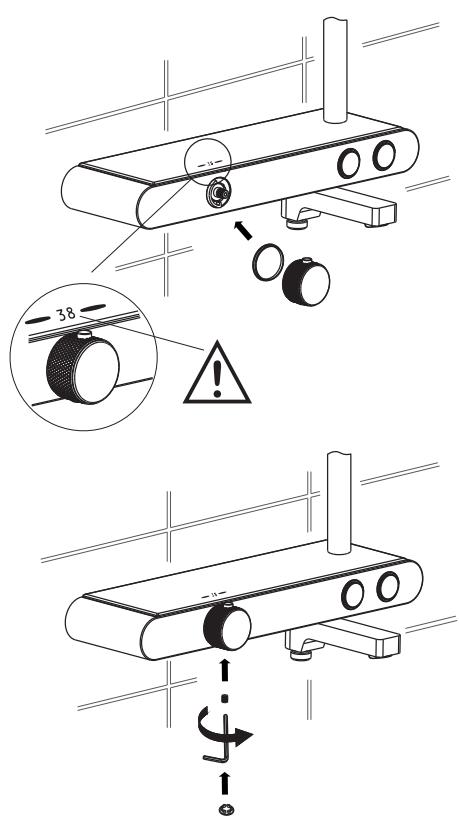 $38\pm2^\circ\text{C} = \text{OK}$

12

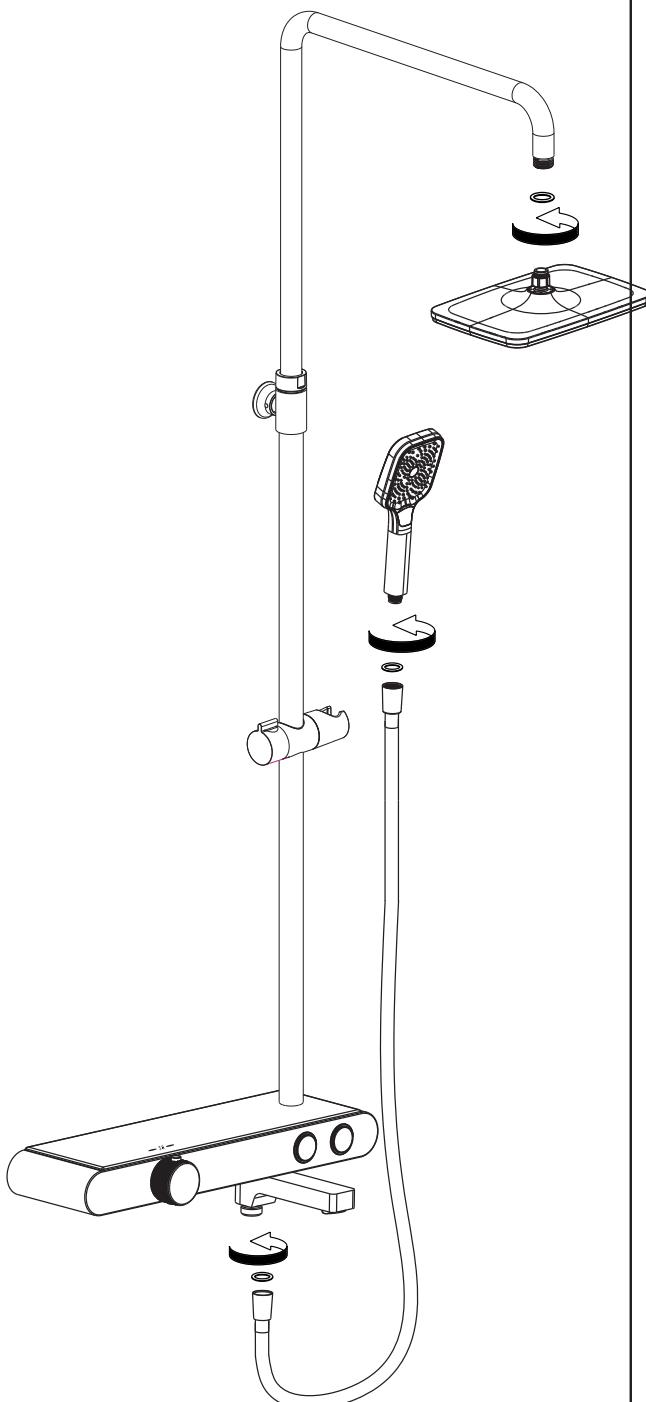

13

